

INSTRUCTION MANUAL

Introduction

To get the most out of your new fan heater, please read through these instructions and the attached safety regulations before use. Please also save the instructions in case you need to remind yourself of the fan heater's functions at a later date.

Technical specifications

Voltage/frequency: 110V ~ 50Hz
Power rating: 2800 W
Settings: 3(40W/1400W/2800W)
Temperature: Continuously adjustable 0-40°C
Dim.: 260x340x385mm
Weight: 5.8 kg

Requires a 32A fuse

Housing of steel plate and heat-resistant lacquer

Supplied complete with cord and plug


The fan heater dials



1. Function selector with three power settings
2. Thermostat dial

Special safety regulations

- The fan heater is not suitable for use outdoors in damp weather, in bathrooms or in other wet or damp environments.
 - Please note that the fan heater can become very hot and should, therefore, be placed at a safe distance from flammable objects such as furniture, curtains and similar.
 - Do not cover the fan heater.
 - Do not place the fan heater immediately under a wall socket.
 - Do not connect the fan heater using an on/off timer or other equipment which can automatically switch the device on.
 - The fan heater must not be placed in rooms where flammable liquids or gases are used or stored.
 - If an extension cord is used, it must be as short as possible and always be fully extended.
 - You must not connect other appliances to the same mains socket as the fan heater.
 - Heater can't using in bath-room, shower stall and Pool directly.
 - If the cord of heater was damaged, it must be repaired by manufacturer or maintenance point
 - **Make sure heater is always under surveillance and keep children and animals away from it:**
- If the fan heater is to be permanently installed, the following instructions must be observed:

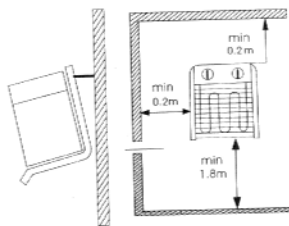

Use

- Position the fan heater so that it stands upright on a firm surface and at a safe distance from wet environments and flammable objects.
- Connect the fan heater to the mains.
- Set the thermostat dial to the maximum temperature.
- The fan heater will switch on when the function selector is set to one of the three power settings.
- Once the room reaches the required temperature, heating element will stop working but fan also working. Once the temperature decreased, The heating element will be on working.
- The fan heater now starts and stops automatically and thus keeps the room temperature constant.